

Laser Configurator

Use this tool to configure your laser. The available options will change to show which features are compatible with your selection.

Hover over the "Learn More" links below each feature for more information.

Once your laser is configured, you will be able to request a price quote and delivery information.

Your configuration is now complete. An image of your configured laser is below.

Model Number: **_ULR_400BA19**

Laser Power

[Learn More ›](#)

10 watt

25 watt

30 watt

40 watt

50 watt

60 watt

75 watt

100 watt

120 watt

150 watt

Class

[Learn More ›](#)

OEM

Cooling

[Learn More ›](#)

Integrated Air

Basic Air

Beam Output


[Learn More ›](#)

Straight Output

Straight Output with Red Laser Pointer

90-degree-down Output

90-degree-down Output with Red Laser Pointer

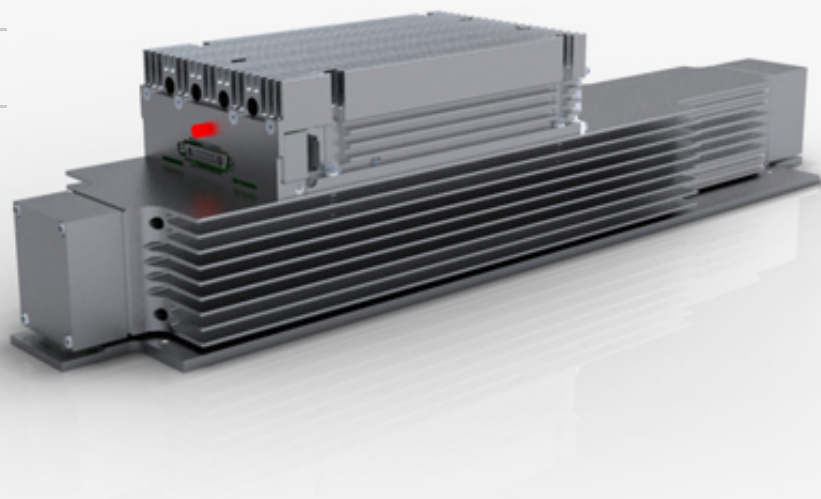

Wavelength

[Learn More ›](#)

10.6 μ

9.3 μ

Start Over

Continue



OEM Division

Phone: +1-480-483-1214
Toll-Free: +1-800-859-7033

oemsales@ulsinc.com