


LD-12XX-YY-350_500_550

Fiber Coupled High Power Fabry-Pérot Laser Diode

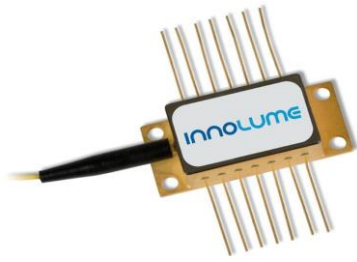

Features:

- 350 / 500 / 550mW output power ex-single mode fiber
- Available wavelength range 1170-1280nm
- Proprietary mirror coating technology enabling high reliability
- PM980 or HI1060 fiber
- Individual burn-in and thermal cycling screening
- Optional monitor photodiode
- RoHS compliance

AVAILABLE POWER OPTIONS

Test conditions: CW operation, chip temperature 25°C, the case is mounted on room temperature heatsink

Part Number	Output power (mW) Pout	Operating current (mA)		Forward voltage (V)	
		Typ.	Max.	Typ.	Max.
LD-12XX-YY-350	350	1050	1300	1.7	1.9
LD-12XX-YY-500	500	1500	1800	1.9	2.1
LD-12XX-YY-550	550	1650	2000	2.0	2.2

SPECIFICATIONS

Test conditions: CW operation, chip temperature 25°C, the case is mounted on room temperature heatsink


Parameters	Symb.	Min.	Typ.	Max.	Unit
Kink-free* output power		1.1×Pout	1.3×Pout		mW
Range of available wavelength		1170		1280	nm
Mean wavelength tolerance				5	nm
Spectral width @ -3dB level at Pout	$\Delta\lambda$		8	12	nm
Threshold current	I _{th}		180	220	mA
Wavelength temperature tunability	$\Delta\lambda/\Delta T$	0.45		0.63	nm/°C
Polarization Extinction Ratio	PER	15			dB

* $\Delta P/\Delta I > 0$ ($\Delta I=5mA$)


TYPICAL PERFORMANCE for reference only*

Test conditions: CW operation, chip temperature 25°C, the case is mounted on room temperature heatsink

Light-Current-Voltage Characteristics

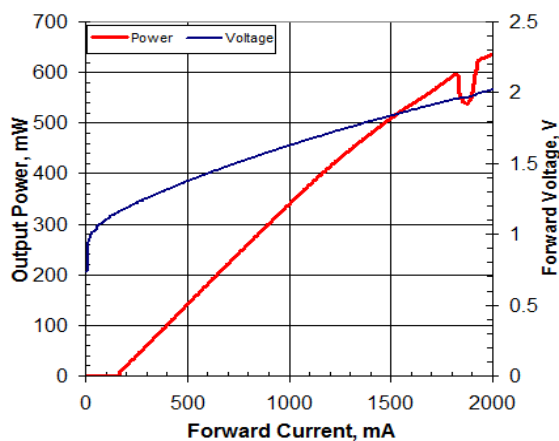

Spectral Characteristics

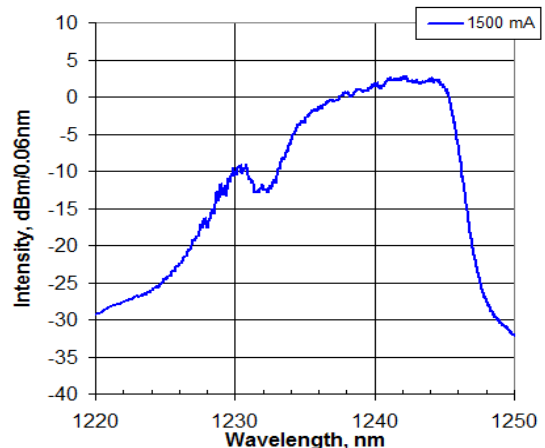

* Performance is given for the 1240nm device. Similar performance is expected for the other wavelengths in the 1170-1280nm range.

ABSOLUTE MAXIMUM RATINGS			
Parameters	Min.	Max.	Unit
Laser Diode reverse voltage	-	2	V
Laser Diode CW forward current	-	10p+300	mA
Thermo Electric Cooler current	-	3	A
Thermo Electric Cooler voltage	-	4	V
Fiber bend radius	3	-	cm
Chip operating temperature range	5	40	°C
Case operating temperature range	0	70	°C
Storage temperature range	-40	85	°C

THERMISTOR SPECIFICATION			FIBER SPECIFICATION			
Parameters	Value	Unit	Parameters	HI1060	PM980	Unit
Thermistor type	NTC	-	Numerical aperture (Typical)	0.14	0.12	
Resistance @25°C	10 ± 0.1	kOhm	Cutoff wavelength	920±50	900±70	nm
Beta 0-50°C	3375±1%	K	Mode-field diameter (@1060nm)	6.2±0.3	6.6±0.3	µm
			Cladding diameter	125±1	125±1	µm
			Coating diameter	245±15	245±15	µm
			Length	1.0 ± 0.1	1.0 ± 0.1	m
			Connector	FC/APC (narrow key)		
						Connector alignment to the PANDA fiber The output light is polarized along the slow axis of PM fiber.

DIMENSIONS (in mm)		Pin identification:
		1 TEC "+" 2 Thermistor 3 Monitor PD anode (optional) 4 Monitor PD cathode (optional) 5 Thermistor 6 - 7 - 8 - 9 - 10 Laser Diode anode "+" 11 Laser Diode cathode "-" 12 - 13 Case 14 TEC "-"

SAFETY AND OPERATING INSTRUCTIONS

The light emitted from this device is invisible and can be harmful to the human eye. Avoid looking directly into the fiber connector when the device is in operation. Proper laser safety eyewear must be worn during operation with open connector.

Absolute Maximum Ratings may be applied to the Laser Diode for short period of time only. Exposure to maximum ratings for extended period of time or exposure to more than one maximum rating may cause damage or affect the reliability of the device. Operating the Laser Diode outside of its maximum ratings may cause device failure or a safety hazard. Power supplies used with the component must be employed such that the maximum forward current cannot be exceeded.

A proper heatsink for the Laser Diode on thermal radiator is required. The Laser Diode must be mounted on radiator with 4 screws (bolt down in X-style fashion with initial torque set to 0.075Nm and final X-style bolt down at 0.15Nm) or with clamps. The deviation from flatness of radiator surface must be less than 0.05mm. It's recommended using of Indium foil or thermal conductive and soft material between bottom of the case and heatsink for thermal interface. It's undesirable to use thermal grease for this.

Avoid back reflection to the Laser Diode. It may give impact on the device performance in aspects of spectrum and power stability. It also may cause fatal laser diode facet damage. Using of optical isolators is highly recommended to block back reflection.

Do not pull the fiber. Do not bend a fiber with a radius smaller than 3 cm. Operate the laser module with clean fiber connector only. Periodically check and clean the connector if necessary. To clean the connector use a clean-room compatible tissue only, put some Isopropyl alcohol onto it and carefully clean the facet of the connector, or use special fiber cleaning tools. Perform cleaning only with the laser current switched off.

Electrostatic discharge can lead to device failure. Take necessary precautions to prevent ESD.



Example of Part Number Identification

LD-1270-HI-350 -> 350mW output power at mean wavelength 1270nm, HI-1060 fiber

LD-1240-PM-500 -> 500mW output power at mean wavelength 1240nm, PM-980 fiber

LD-1210-PM-550 -> 550mW output power at mean wavelength 1210nm, PM-980 fiber

NOTE: Innolume product specifications are subject to change without notice