# litilit

# INDYLIT MM 20

Industrial Femtosecond Laser for Material Processing 1030/515 nm, 400 fs – 2 ps, 20 W, 100 kHz – 1 MHz



WWW.LITILIT.COM

# **ROBUST DESIGN AND NO MAINTENANCE**

# **FEATURES**

- Extremely robust and stable
- Adjustable repetition rate, pulse duration, power
- High pulse energy and clean pulse shape
- Passively air cooled
- Maintenance-free & turn-key
- Protected against dust

# **APPLICATIONS**

- Material microprocessing
- Ophthalmology
- Semiconductor and electronics
- Display manufacturing
- Battery manufacturing
- Stainless steel black and color marking

The **Indylit 20** is the highest average power and most efficient passively aircooled femtosecond laser on the market. If you need a reliable femtosecond laser that is maintenance-free, turn-key and has exquisite optical parameters – look no further!

The laser features an innovative and patented passive cooling design, ensuring high stability of the optical parameters such as pulse duration, beam pointing, and power. Indylit 20 mechanical construction can withstand almost everything you can throw at it. It is even protected against the dust!

Built-in optional second harmonics (SH) module provides wavelength extension enabling even wider range of material processing applications.

Model	Indylit 20	Indylit 20 SH <sup>1)</sup>	
Central wavelength	1030 ± 2 nm	515 ± 1 nm	
Average power <sup>2)</sup>	> 13 W @ 100 kHz > 18 W @ 1 MHz (Typ 20 W @ 1 MHz)	> 7 W @ 100 kHz > 3 W @ 1 MHz	
Max. pulse energy <sup>2)</sup>	> 130 µJ	> 70 µJ	
Pulse duration	< 400 fs		
Pulse duration tunability	400 fs – 2 ps	N/A	
Switch time between outputs	< 1 s		
Internal pulse repetition rate	100 kHz – 1 MHz, down to 30 kHz in burst mode		
Pulse picker	integrated		
Triggering mode	Pulse picker control via TTL gate		
Burst length	112 pulses		
Max. energy in burst	> 500 µJ	> 200 µJ	
Power attenuation <sup>3)</sup>	100 – 1%		
Beam quality	M² < 1.2		
Beam circularity 4)	> 0.90	> 0.85	
Beam diameter (at 1/e² level)	2.6 ± 0.3 mm	2.3 ± 0.3 mm	
Polarization	Linear horizontal	Linear horizontal, > 200:1 extinction	
Prepulse contrast	> 1:	> 1:1000	
Post pulse contrast	> 1:100		

#### SPECIFICATIONS



#### SPECIFICATIONS (continued)

Model	Indylit 20	Indylit 20 SH <sup>1)</sup>
Beam divergence (full angle)	< 1 mrad	
Beam pointing (RMS) <sup>5)</sup>	< 20 µrad	
Beam pointing vs temperature	< 20 µrad/°C	
Power stability (RMS) <sup>6)</sup>	< 1%	< 2%
Pulse energy stability (RMS) 7)	< 1%	< 2%
Warm-up time (cold start)	< 30 min	
Warm-up time (warm start)	< 3 min	
Laser control interface	CAN, USB	
Operating voltage	24V, 25A (100240 V AC, 4763 Hz to 24V AC/DC converter included)	
Average power consumption (after warm-up)	300 W	
Maximal power rating	700 W	
Operating temperature	18 – 32 °C <sup>8)</sup>	
Humidity	non condensing	
Transportation/storage temperature	-20 – +70 °C	
Dimensions: Laser head (L × W × H) Control unit (L × W × H) AC/DC converter (L × W × H)	498 x 248 x 194 mm 449 x 370 x 140 mm 250 x 125 x 60 mm	
Umbilical length	3 ± 0.1 m	
Colling: Laser head Control unit	air (passive) forced air (fans)	

- <sup>1)</sup> Indylit 20 SH model has also 1030 nm output with the same specifications as Indylit 20 model. The outputs can be switched by GUI interface or CAN command.
- <sup>2)</sup> Please refer to the power and energy vs. pulse repetition rate curves for typical values.
- <sup>3</sup>) Attenuation can be controlled by a few different methods: a) by PC user interface, b) by CAN register, c) by analog input (0 – 1 V, rise time < 1 μs). Beam quality specifications are maintained down to 10% power level.
- $^{4)}$  Defined as the worst case ellipticity along the z-scan (± 5 ×  $L_{\rm Rayleigh})$  of the beam.
- <sup>5)</sup> Measured during 8 h operation starting 30 minutes after warm-up. Environmental temperature stability within ± 1 °C.

- <sup>6)</sup> Measured with integration time of 1 s at the same conditions as (6).
- $^{7)}$  Measured within 10 s time interval for at least 1000 pulses.
- <sup>8)</sup> Higher operational temperature is available on request. Please contact LITILIT for details.
- <sup>9)</sup> Technology is protected by international patents: LT6261 (B); JP6276471 (B2); US10038297 (B2); EP3778137; DK378437 (T3); CM106575849 (B); PL3178137 (T3); LT6639 (B); LT2020 563


### C€ RoHS




DANGER: VISIBLE AND/OR INVISIBLE LASER RADIATION AVOID EVE OR SKIN EXPOSURE TO DIRECT, REFLECTED OR SCATTERED RADIATION CLASS 4 LASER PRODUCT




#### PERFORMANCE

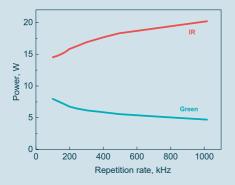


Average power dependence on the pulse repetition rate for infrared and green (SH option) output

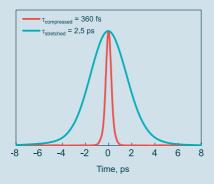


Pulse autocorrelation traces of optimally compressed and maximally stretched pulses at 130  $\mu$ J pulse energy and 100 kHz repetition rate

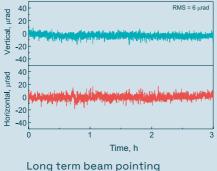


Long term beam pointing measurement

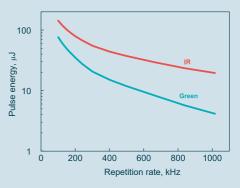

Pulse energy dependence on the pulse repetition rate for infrared and green (SH option) output

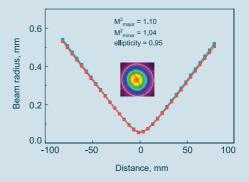


Beam z-scan measurement and beam profile in far field

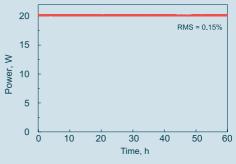


Long term output power stability

#### DRAWINGS

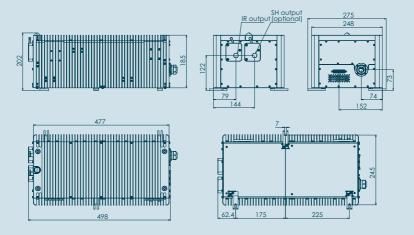

Drawing of Indylit 20 laser head (in mm)

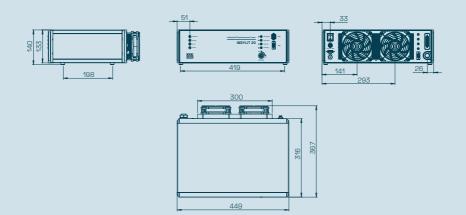

Drawing of Indylit 20 laser control unit (in mm)





Savanoriu ave 235, LT-02300 Vilnius, Lithuania info@litilit.com | +370 669 79833 | litilit.com

**NOTES**